

innoliving
easy tech, easy life

**CONDIZIONATORE
EVAPORATIVO 3L**



INN-515
MANUALE D'USO
USER MANUAL

Zie voor afbeeldingen de handleiding in het Engels.

HOE TE GEBRUIKEN?

1. Uit-knop en ventilatorsnelheid Instellingen. Om de machine te bedienen, moet u een luchtventilatiemodus selecteren. Het apparaat heeft drie verschillende instellingen voor de ventilatorsnelheid: "Laag", "Midden" en "Hoog" (laag-gemiddeld hoog). • Druk op de knop "Low" om de luchtkoeler op lage snelheid te laten werken. • Druk op de knop "Mid" om de luchtkoeler op gemiddelde snelheid te laten werken. • Druk op de knop "High" om de luchtkoeler op hoge snelheid te laten werken. • Druk op de UIT-knop om de ventilator uit te schakelen en het apparaat uit te schakelen.

2. Koelfunctie (koeler) • Druk op de "Koeler" -knop (links op display) om de koelfunctie te activeren nadat u de ijskisten en water in de tank heeft gedaan, zie secties "HOE DE TANK TE VULLEN" en "HOE DE IJSKOFFERS TE GEBRUIKEN". Schakel deze functie niet in als de tank leeg is.

3. Swing-functie (Swing) • Druk op de "Swing" -knop (rechts op display), laat de externe vinnen naar rechts en naar links bewegen en plaats de binnenste vinnen van luchtverspreiding in de gewenste positie. Deze vinnen maken het mogelijk de lucht naar boven of beneden te richten en moeten handmatig worden gepositioneerd.

HOE DE TANK TE VULLEN?

Haal de tank eruit en vul 1/3 met water tot aan de MAX-markering. • Het waterpeil mag het MAX-peil op de tank zelf niet overschrijden. • Plaats de eerder ingevroren ijsboxen met water in de tank om een nog koudere luchtstraal te verkrijgen. Opmerking: het waterniveau in de tank mag het aangegeven

MAX-niveau niet overschrijden, zelfs niet nadat de koelelementen zijn geplaatst.

HOE DE KOELELEMENTEN TE GEBRUIKEN

Als u de koelelementen in de tank plaatst, kunt u een koudere/frissere luchtstraal krijgen. • Vul de elementen met kraanwater en bewaar ze een paar uur in de vriezer. Eenmaal bevroren, zijn de koelelementen klaar om in de tank te worden geplaatst.

REINIGING EN ONDERHOUD.

Stofophoping op het stoffilter kan een goede luchtstroom verhinderen. Daarom raden we aan om het filter en alle onderdelen regelmatig te reinigen volgens onderstaande instructies. Schakel het apparaat uit en verwijder de stekker uit het stopcontact voordat u verdergaat met onderhoud of reiniging. Reinig de productcomponenten nooit met brandbare vloeistoffen. De dampen kunnen brand of explosies veroorzaken.

STOFFILTER.

Om het stoffilter te verwijderen, verwijdert u eenvoudig de schroeven en drukt u op de twee ontgrendelingsniveaus aan de bovenkant van het filter om het te verwijderen.

Gebruik een mild reinigingsmiddel en een zachte borstel om stof en vuil van het filter te reinigen en te verwijderen.

Zet het filter weer op zijn plaats door eerst de onderkant in te drukken en op het bovenste deel te drukken om het te vergrendelen en vast te schroeven.

KOELKUSSEN.

Na het verwijderen van het stoffilter is het koelkussen zichtbaar. Verwijder de pad met de juiste bescherming en verwijder de pad voorzichtig. Gebruik een schone, zachte borstel om stof en vuil van de pad te verwijderen. Spoel indien nodig met water en laat door middel van lucht drogen. Gebruik geen chemische schoonmaakmiddelen die de pad kunnen beschadigen.

WATERTANK.

Draai de vergrendelingshendel van de tank in horizontale positie en trek de tank naar u toe om hem gedeeltelijk te verwijderen. Verwijder al het resterende water uit de tank. Gebruik voor het reinigen een mild reinigingsmiddel en droog grondig af. Plaats de tank in de juiste ruimte en draai de vergrendelingshendel in verticale positie.

DE BUITENKANT VAN HET PRODUCT REINIGEN.

Reinig het externe deel van het apparaat met een vochtige doek met uitzondering van het bedieningspaneel en droog met een zachte doek. Reinig het bedieningspaneel met een droge, zachte doek. Gebruik geen schuurmiddelen. Zorg ervoor dat het apparaat grondig is gedroogd voordat u doorgaat met normaal gebruik.

Voor alle vragen over de werking van uw aircooler of heeft u storingen en/of problemen met het gebruik/werking, alsmede alle garantie-gerelateerde zaken (u heeft 2 jaar garantie), dient u bij voorkeur via email contact op te nemen met de klantenservice van Innolife/Htrade, dit kan via : service@htrade.nl Heeft u geen beschikking over email dan kunt u ons telefonisch bereiken op werkdagen van 9.00 – 16.00 uur op 06 20 46 35 25

BEFORE USE, READ ALL THE INSTRUCTIONS AND WARNINGS CAREFULLY AND KEEP THIS USER MANUAL SAFE FOR FUTURE REFERENCES.

Before use, read the operating instructions and warnings carefully. Keep this manual safe for the entire life of the device, for future references. Failure to follow the instructions could cause accidents and void the warranty by raising the manufacturer from any liability.

This equipment must be used only for the purpose for which it was designed, that is as an air cooler for household use. Any other use is considered improper and therefore dangerous.

WARNINGS

- Keep all packing material (plastic bags, cardboard, polystyrene, etc..) out of reach of children, since they are potential dangerous and must be disposed of as required by law.
- Before plugging in the appliance, check that the voltage indicated on the rating label matches the mains voltage.
- Before use, check that the power cord and plug are not visibly damaged. If the cord or plug are damaged, they must be replaced by qualified personnel, by manufacturer or by the authorized after sale service.
- This appliance can be used by children over 8 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if under surveillance, or if they have received the instructions regarding use of the device and if they understand the dangers involved. The cleaning and maintenance operations performed by the user must not be performed by children. Keep the appliance and its cord out of reach of children under the age of 8 years old.
- Make sure that children do not play with the appliance.
- Disconnect the power plug by pulling the plug, not the

cable.

- Do not touch the plug and the device with wet hands.
- Remove the plug from the mains when the device is not in use
- Always make sure the plug is fully inserted into the electrical outlet before turning on the product.
- Always place the product on a flat and stable surface.
- Do not use the device outdoors or near a bath tub, pools, showers etc. The water level in the tank must never exceed the MAX level indicated in the tank.
- Do not insert foreign objects into the device.
- Do not obstruct the entrance and the air leakage in any way.
- Do not add chemical or metallic products inside the water tank. These components can cause damage to the product and prevent the proper operation.
- Avoid prolonged exposure of children and elders to the direct flow of the air.
- Do not leave the unit exposed to direct sunlight for a long period of time.
- Do not use aggressive cleaning agents to clean the product.
- Do not let the unit and / or the cable come into contact with hot surfaces.
- This device must be used only for the purpose for which it was conceived.

- Avoid dropping the unit.
- In case of malfunctions, contact the authorized after sales service. Do not try to repair the product yourself.
- Do not use the product if it has been dropped, if there are any visible damage or leaks.
- In case of failure or faulty operation, switch the appliance off and do not try to tamper with it. For repairs contact the authorized service center.
- Operate in a well-ventilated area. During use, the device must be kept at a minimum distance of 20 cm from the wall to ensure the correct operation of the air intakes. The device should not be placed immediately under or over curtain or similar. Do not cover the device with blankets or similar, during use. Do not place objects over the appliance
- Keep the ice boxes out of the reach of children. Do not swallow the liquid inside the ice boxes. Switch off the appliance before unplugging.
- Make sure the unit is off and disconnected from the main power, before removing the filter, performing cleaning activities or fill the tank. Do not use the appliance outdoor, or in particularly humid spaces nor bath tubes.
- Disconnect the product from the power socket, before any cleaning operation or water refill.

HOW TO USE

1. OFF Button and Fan Speed Settings

To operate the machine, you must select an air ventilation mode.

The device has three different fan speed settings: "Low", "Mid" and "High" (low-medium-high).

- Press the "Low" button to allow the air cooler to work at low speed.
- Press the "Mid" button to allow the air cooler to work at medium speed.
- Press the "High" button to allow the air cooler to work at high speed.
- Press the OFF button to turn off the fan and switch the device off.

2. Cooling Function (Cooler)

- Press the "Cooler" button to activate the cooling function after adding the ice boxes and water into the tank, see sections "HOW TO FILL THE TANK" and "HOW TO USE THE ICE BOXES". **Do not enable this function if the tank is empty.**

3. Swing Function (Swing)

- Press the "Swing" button let the external fins move to the right and to the left and place the inner fins of air dispersion in the desired position. These fins make it possible to direct the air upwards or downwards and must be positioned manually.

HOW TO FILL THE TANK

Take out the tank and fill 1/3 with water up to the MAX mark.

- The water level must not exceed the MAX level indicated on the tank itself.
- Insert the previously frozen ice boxes in the tank with water to obtain an air jet even more fresh.

Note: The water level in the tank must not exceed the MAX level indicated even after having inserted the ice boxes.

HOW TO USE THE ICE BOXES

If you place the ice boxes in the tank, you can get a fresher air jet.

- Fill the boxes with tap water and store them in the freezer for a couple of hours.

Once frozen, the ice boxes are ready to be placed in the tank

CLEANING AND MAINTENANCE


Dust accumulating on the dust filter may prevent proper air flow. Therefore we recommend to clean the filter and all its parts regularly, following the instructions below.

Before proceeding with any maintenance or cleaning operation, switch off the appliance and remove the plug from the main socket.


Never clean the product components with flammable liquids. The vapours may cause fire or explosion.

Dust Filter

To remove the dust filter, simply remove the screws and press the two release levels located

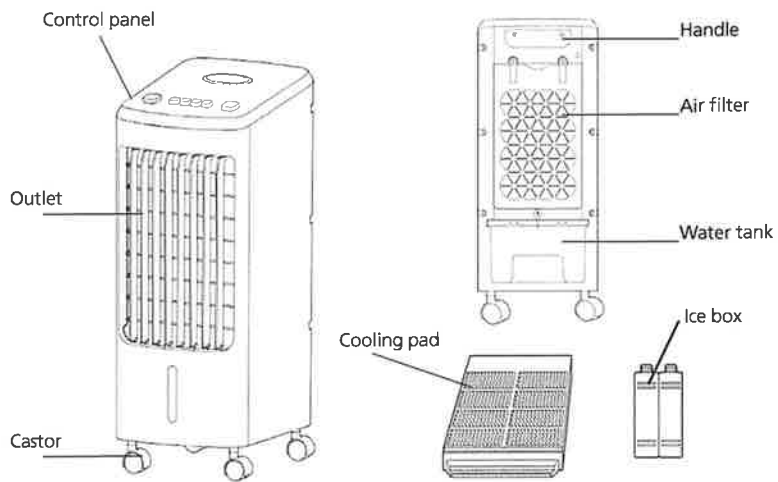

DESCRIPTION OF PRODUCT

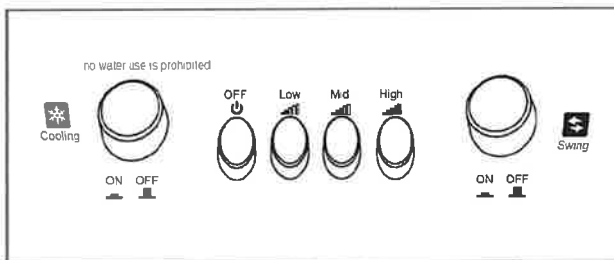

CONTROL PANEL

at the top of the filter down to remove it. Use a mild detergent and a soft brush to clean and remove dust and dirt from the filter. Put the filter on again inserting the bottom firstly and pushing the upper part to lock it and screw it.

Cooling Pad

After removing the dust filter, the cooling pad is visible. Take out the pad with the appropriate protection and gently remove the pad. Use a clean, soft brush to remove dust and dirt from the pad. Rinse with water if necessary, and leave to air dry. Do not use chemical cleaning solutions that can damage the pad

Water Tank

Turn the tank lock lever into the horizontal position and pull the tank towards you in order to extract it partially. Eliminate any residual water from the tank. Use a mild detergent for cleaning and dry thoroughly. Place the tank in the appropriate space and turn the lock lever to the vertical position.

Cleaning the outside of the product

Clean the external part of the device with a damp cloth with the exception of the control panel and dry with a soft cloth. Clean the control panel with a dry soft cloth. Do not use abrasive cleaners. Make sure the unit has been thoroughly dried before proceeding again with normal use.

Description	Symbol	Value	Unit
Maximum fan flow rate	F	5,3	m ³ /min
Fan power input	P	80	W
Service Value	SV	0,07	(m ³ /min)/W
Stand by power consumption	P _{sb}	/	W
Fan sound power level	L _{WA}	65	dB(A)
Maximum air velocity	C	8	metri/sec
Standards	IEC 60879:1986 (corr.1992)		
Manufacturer	Innoliving Spa Via Merloni, 9 60131 Ancona		

RATING LABEL



This product complies with all the applicable European regulations



Read carefully the user manual



Class II insulated electrical appliance



INFORMATION TO USERS according to Legislative Decree No. 49 of March 14, 2014
 "2012/19/UE Implementation of the Directive on Waste Electrical and Electronic
 Equipment (WEEE)"

The crossed-out dustbin symbol indicates that the product at the end of its life must be collected separately from other waste. The user should, therefore, take the equipment with the essential components at the end of its useful life to the separate collection center of electronic and electrical waste, or return it to the retailer when purchasing new equipment of equivalent type, in ratio of one to one, or one to zero for devices with larger side less than 25 CM. The separate collection for the decommissioned equipment for recycling, treatment and environmentally compatible disposal contributes to avoid possible negative effects on the environment and human health and promotes recycling of the materials. Improper disposal of the product by the user entails the application of administrative sanctions according to Legislative Decree No. 49 of 14 March 2014.

innoliving
easy tech, easy life

Innoliving Spa
Via Merloni, 9
60131 Ancona Italy
Tel 0712133550
www.innoliving.it

MADE IN CHINA



Rev.00_10_2019